

PERRIN

EVO 8-9 Stout Mount Upgrade

07232008

Thank you for purchasing the PERRIN Stout Mount Upgrade. Persons experienced in the installation and proper operation of suspension systems should only perform installation of these Upgraded Swaybar Mounts. Please read through all the instructions before performing the installation.

Parts Included with Stout Mount Upgrade:

- Left and Right Stout mount blocks
- 25mm bushing bracket/washers/grease set (5179)
- (4) 3/8-24x1" hex bolts
- (4) 3/8-24 nuts
- (8) 3/8 washers


Checked by _____

Removing Sway bar & Sway bar Mounts:

- 1) Park car on a smooth level surface. Using suitable commercial vehicle hoist or floor jack, raise vehicle onto jack stands. NEVER WORK UNDER A VEHICLE SOLELY SUPPORTED BY A JACK! DEATH OR INJURY MAY OCCUR.
- 2) Disconnect the endlinks from the existing sway bar.
- 3) Remove exhaust system from car.
- 4) Remove sway bar and factory Sway Bar mounts in one step. Use 14mm socket to remove (6) bolts.
- 5) Remove factory sway bar mounts from sway bar.

Install PERRIN Sway Bar Mounts

- 1) Install PERRIN Sway Bar Mounts as shown in Fig. 1. Use factory bolts to secure to chassis and tighten to factory specs.
- 2) Use 22mm bushings for stock EVO swabyar, and 25mm bushings for PERRIN swaybar.
- 3) Generously grease bushings using supplied grease and place them on bar. Align bushings and bushing brackets with Swaybar brackets prior to installing. Install sway bar on PERRIN Sway Bar Mounts using the supplied bolts/washers.
- 4) There is some adjustment front to back on the bushings, which can aid in different endlink, swaybar, and muffler combinations clearing one another. This should be adjusted after car is lowered to ground to check for clearance issues.
- 5) Tighten all sway bar bushing hardware.
- 6) Connect end links using hardware removed previously. Tighten to factory torque specs.
- 7) Lower car from stands and road test vehicle. If "squeaking" is noted in rear of car, re-grease bushings.

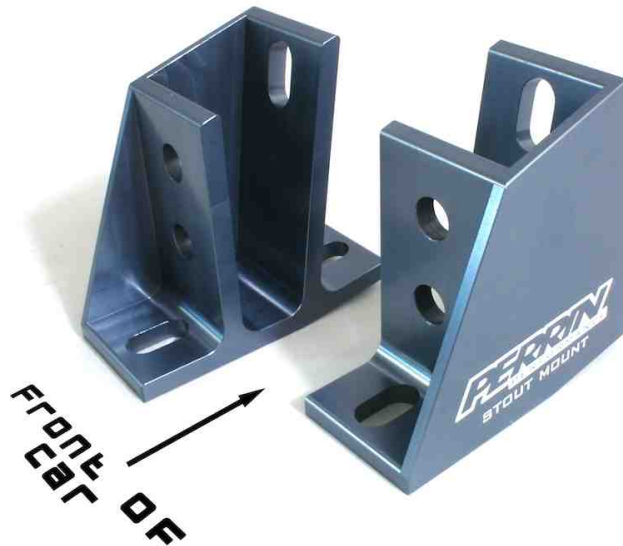

For questions & comments or more grease please contact

TECH@PERRINPERFORMANCE.COM

503-693-1702

AIM contact ALTAPERRINSALES